
	1113	Ventricular Assist Devices
Nor-Cal EMS Policy & Procedure Manual		Treatment Guidelines
Effective Date: 7/01/2023		Next Revision: 7/01/2026
Approval: Jeffrey Kepple MD – MEDICAL DIRECTOR		SIGNATURE ON FILE

Authority: Health and Safety Code Division 2.5, California Code of Regulations, Title 22, Division 9.

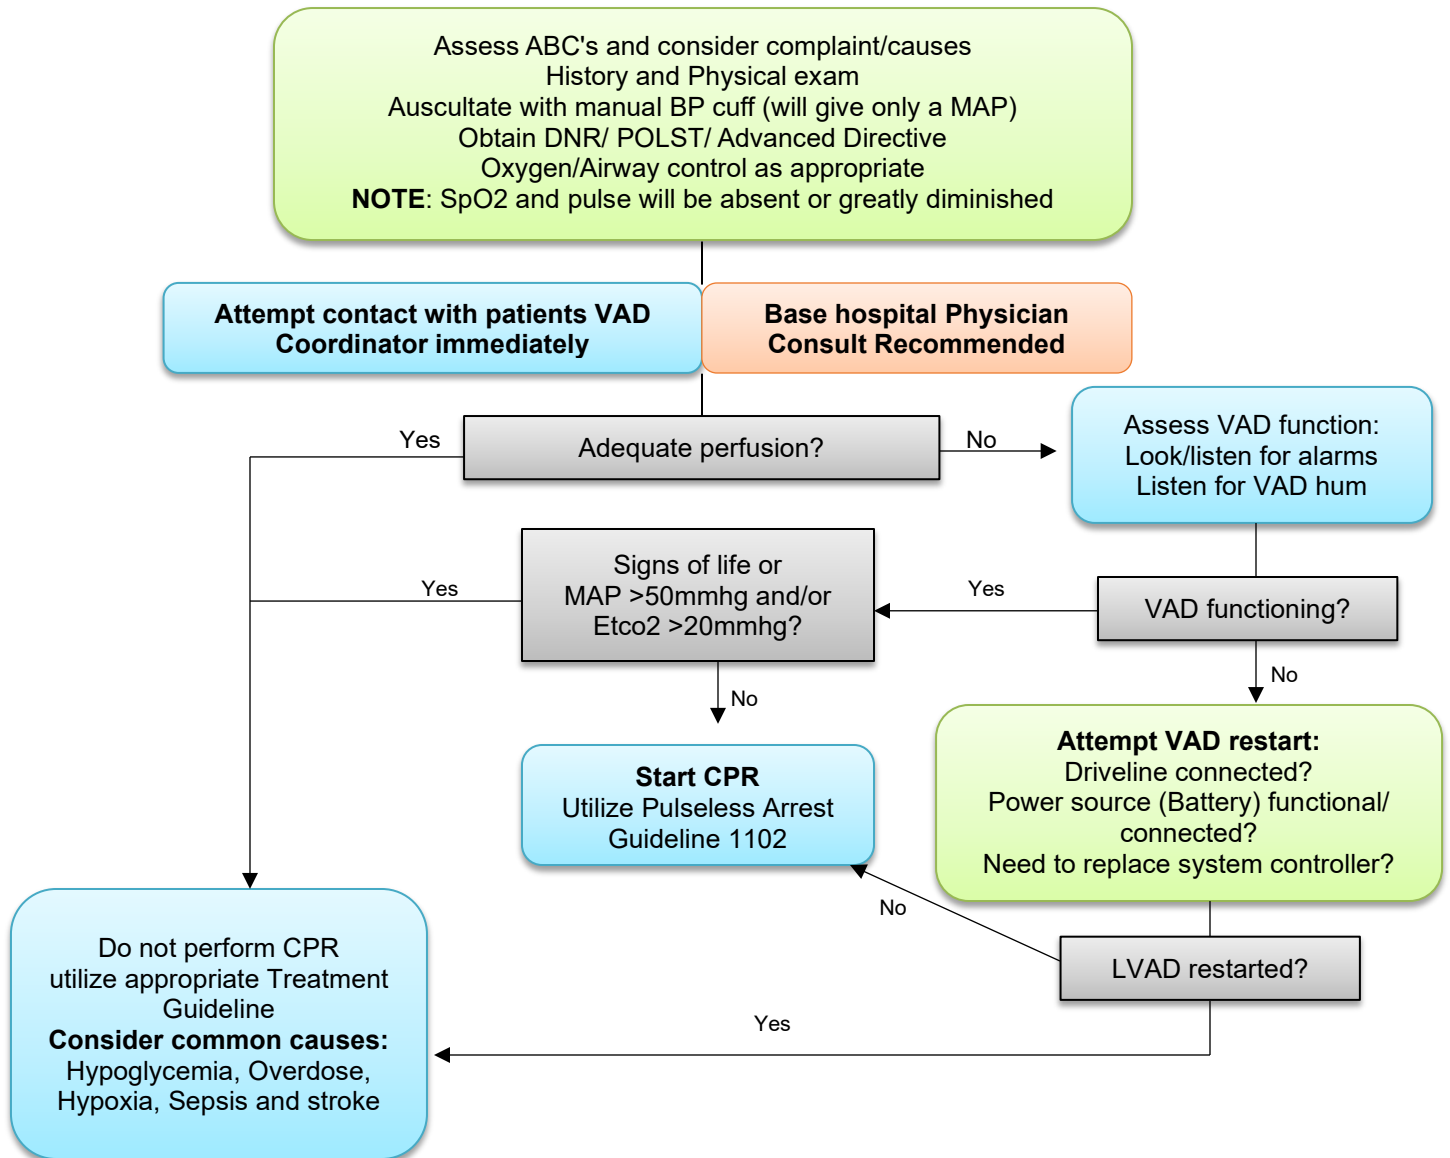

Critical Information

- If defibrillation is needed, do not place pads over patient's device- Anterior/Posterior placement of pads is preferred.
- The VAD Coordinator should be contacted immediately. The patient and caregiver will have contact information; it may also be found on the device, a medical alert bracelet, near a phone, or other obvious location. The VADC may be on the phone upon EMS arrival
- The VAD Coordinator is a valuable resource but is **NOT** medical control. Request physician consult if necessary
- Request POLST/DNR status
- Ensure **ALL** equipment, back up batteries, chargers etc. are brought with patient during transport.